


GPI by **DEVILBISS**
AUTOMOTIVE REFINISHING

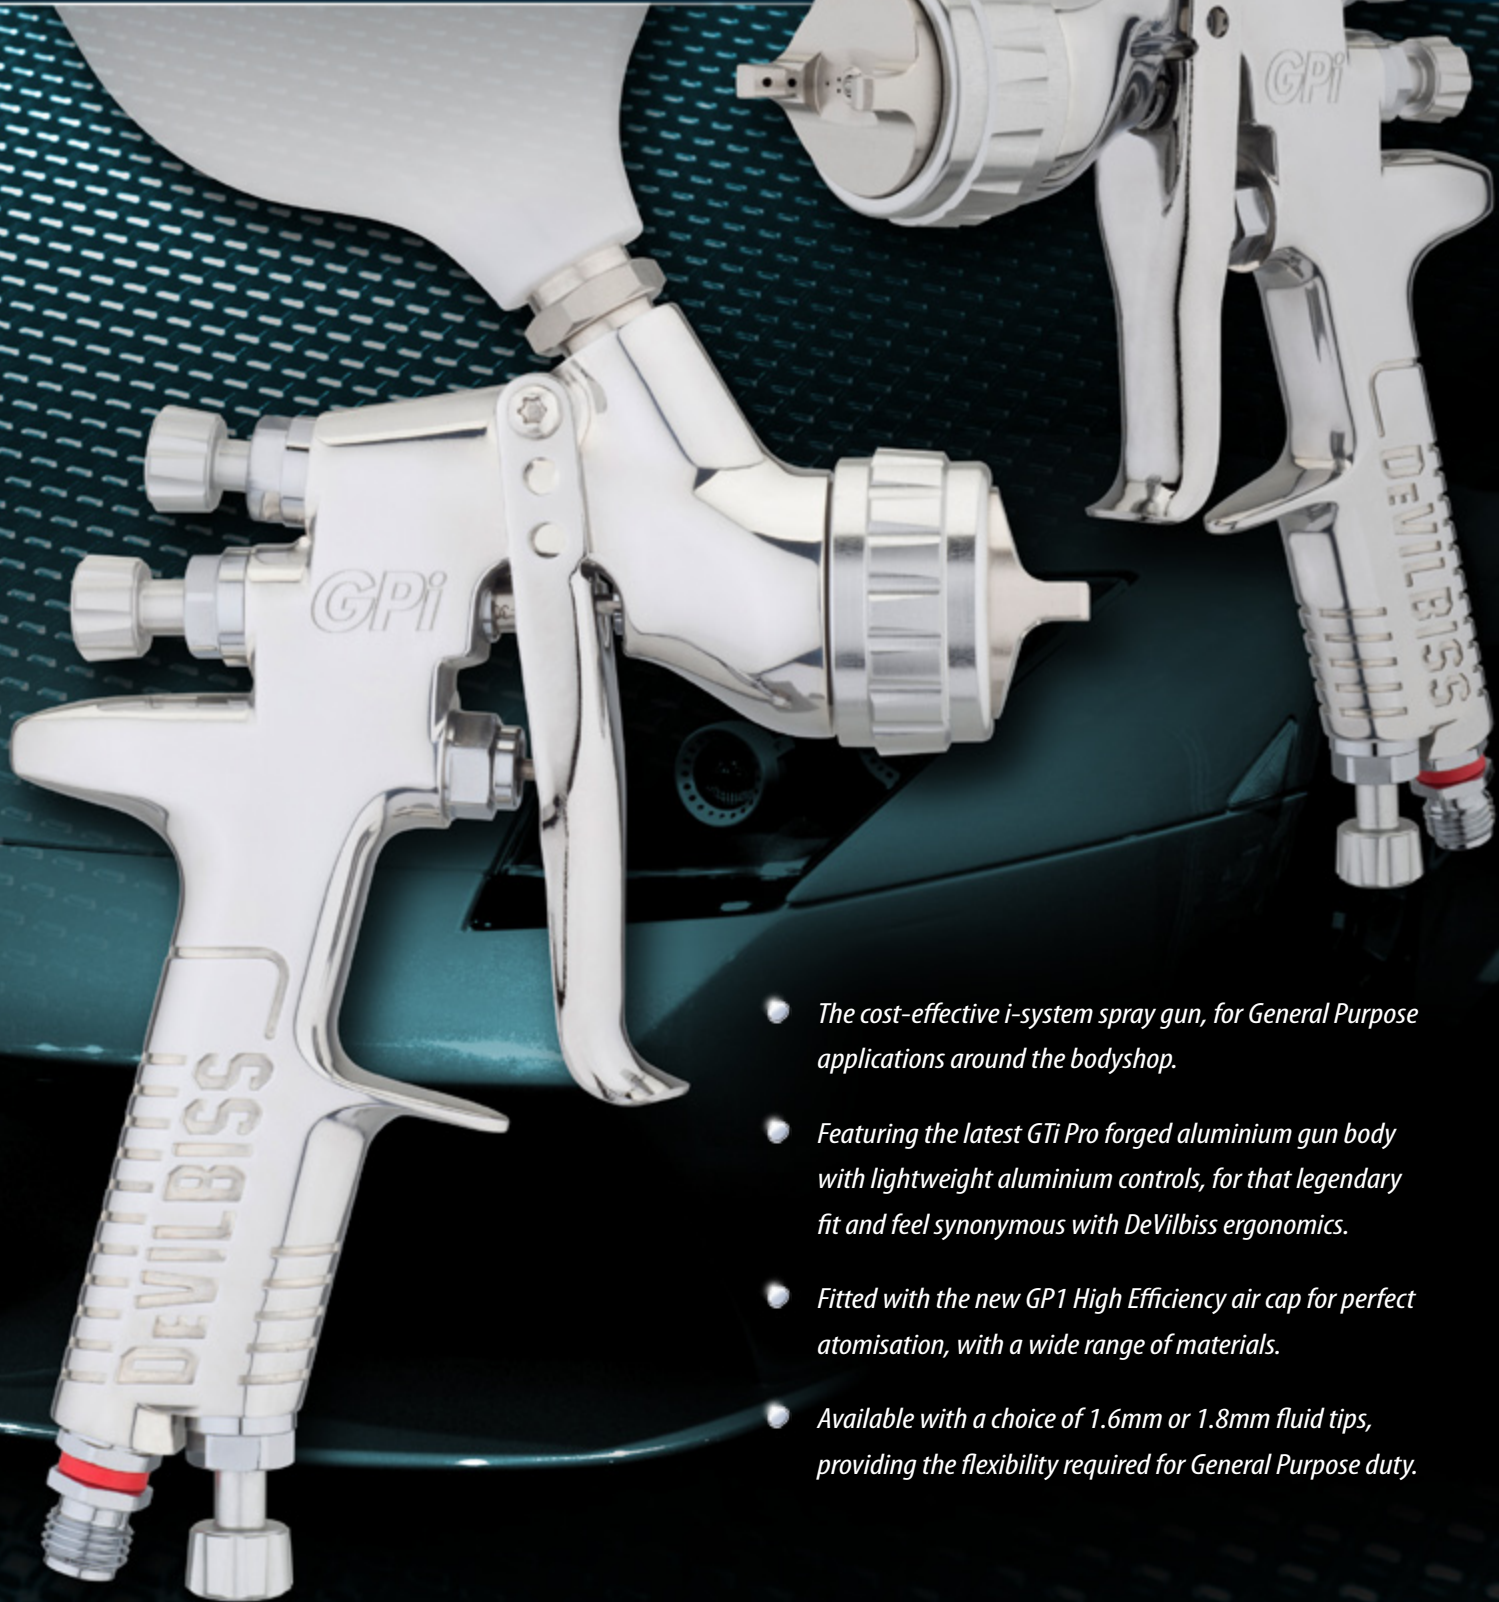

- *The cost-effective i-system spray gun, for General Purpose applications around the bodyshop.*
- *Featuring the latest GTi Pro forged aluminium gun body with lightweight aluminium controls, for that legendary fit and feel synonymous with Devilbiss ergonomics.*
- *Fitted with the new GPI High Efficiency air cap for perfect atomisation, with a wide range of materials.*
- *Available with a choice of 1.6mm or 1.8mm fluid tips, providing the flexibility required for General Purpose duty.*

*Affordable i-system spray gun technology
for General Purpose applications*

DEVILBISS
i system

Generally purposeful!


Every bodyshop has a need for a General Purpose spray gun. Some relegate a worn out or cheap gun to these duties and generally, finish quality and reliability suffers, often leading to expensive re-work.

Now DeVilbiss is offering a cost-effective alternative enabling bodyshops to benefit from i-system standard atomisation and performance at a price every bodyshop can afford.

The GPi spray gun comes with the specially developed GP1 "High Efficiency" air cap and a choice of 1.6 or 1.8mm fluid tips designed to spray a wide range of materials including enamels, synthetics, primers, 2 pack commercial paints as well as materials that demand high or fast application rates.



The forged aluminium gun body is virtually identical to the legendary GTi Pro and instead of being anodised, features the traditional polished finish therefore keeping costs down, while maintaining optimum performance and comfort.

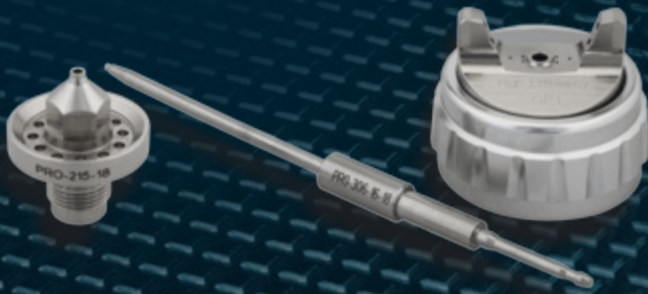

Technically speaking...

Specification and Technical Data

Air Supply Connection Universal:	1/4" BSP and 1/4" NPS male
Air Inlet Pressure:	2.0 Bar inlet (29psi)
Air Consumption:	270 l/min (9.5cfm)
Cup Capacity:	560 mls
Weight (gun & cup):	683g
Air Cap:	Plated brass
Fluid Tip:	Stainless steel
Fluid Needle:	Stainless steel

GPi Performance Data

Air Cap	Fluid Tip	Fluid Flow (cc/ml min)	Pattern Length (mm)
GP1	No.16	180-280	280-320
GP1	No.18	200-350	280-320

GPi Spray Gun Kits

GPI-GP1-16	Gravity gun & cup kit – GPI air cap & 1.6mm fluid tip
GPI-GP1-18	Gravity gun & cup kit – GPI air cap & 1.8mm fluid tip



DEVILBISS
AUTOMOTIVE REFINISHING

www.devilbisseu.com

Ringwood Road, Bournemouth, Dorset. BH11 9LH Tel: +44 (0) 1202 571111 Fax: +44 (0) 1202 573488 Email: info-uk@devilbisseu.com