



# Pro VISOR

by **DEVILBISS**  
AUTOMOTIVE REFINISHING

THE ADVANCED AIR-FED RESPIRATORY PROTECTION SYSTEM FOR PROFESSIONAL REFINISHERS

*The Pro Visor air fed respiratory protection system has been designed specifically for use by sprayers, in the spray booth.*

*The technically advanced design provides the perfect combination of safety and comfort, with excellent freedom of movement.*



Visor is fully adjustable for all head shapes and sizes

Peak to help reduce booth light glare

Anti-static, non-kink visor supply hose

Wide peripheral vision and improved clarity

Swivel connection and Y connection ensures total freedom of movement for the sprayer

Ergonomic waist belt fitting

Waist belt unit can be easily fitted for left or right handed sprayers

Quick replacement of activated carbon filter


Whistle warns the sprayer if visor supply air pressure is too low

Hoses can be directed for sprayer convenience and ease of connection



## A breath of fresh air...

The Pro Visor disperses breathing air gently and quietly around the lightweight visor at a positive pressure with no misting or discomfort, ensuring every sprayer can work at their best.

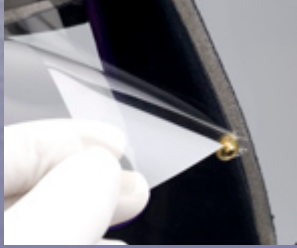

The wrap around visor provides excellent visibility for the sprayer with a clear, wider peripheral vision than they may be used to, while the removable peak helps reduce glare from spray booth lighting. There is also plenty of room to cater for sprayers who wear spectacles.

Anti-static replaceable clear visor covers maintain optimum visibility and are available in packs of 10 and 50.

## A visor fit for a Pro...



Perfect fit is vital to a sprayer's comfort and ensures they perform to the best of their ability, that's why the Pro Visor has been designed with three dimensional adjustment.

This means the Pro Visor is fully adjustable for the head circumference using the rear adjustment knob, the sprayer's head height can be adjusted at



the top of the head band, while head width is adjustable using a set of three spacers.

The elasticated face seal provides long lasting comfort and fit and just to prove that we try to think of everything, the visor air supply hose is anti-static and anti-kink too!



## Belt up...

The Pro Visor waist belt is fitted with an ergonomic, quick action fastener and can be clipped on and adjusted in seconds, even when using gloves.

The innovative design of the waist belt regulator and filter unit



ensures optimum sprayer comfort and safety through constant regulation of air pressure and flow, over a range of input pressures. Replacing the activated carbon, odour removal filter, is quick and easy.

Professional refinishers using the Pro Visor system will appreciate that the Y piece swivel means the waist belt unit can be worn on the sprayer's left or right. It also means the supply hose can be directed away from the sprayer for unrestricted movement and superb spray dynamics.

The ergonomically designed waist belt unit has an integral whistle to warn the sprayer if the visor supply pressure is too low.



## Specifications...

Protection:	APF = 40 / NPF = 200
Carbon Filter Life:	3 months
Supply Pressure:	4.0 bar (60 psi) minimum to 7.0 bar (100 psi) maximum
Air Flow Rate:	128 - 160 l/min (4.5 - 5.7 SCFM)
Noise level @ 160 l/min:	69.7 db
Approvals:	PPE directive 89/686/EEC. Conforms to EN 14594:2005 Class 3A
Zone Classifications:	Suitable for use in Zones 1 and 2 Hazardous areas (gas groups IIA and IIB)

### PART NUMBERS:

PROV-600	Complete visor kit with waist belt
PROV-20-K	Waist belt and regulator
PROV-22-K10	Pack of 10 visor covers
PROV-22-K50	Pack of 50 visor covers
PROV-27-K4	Pack of 4 filter elements

**DEVILBISS**  
AUTOMOTIVE REFINISHING

[www.devilbisseu.com](http://www.devilbisseu.com)